



# General Product Specifications

Eureka Pearl Modular & Jindara Tilga Modular

Dimensions and Specifications	
Overall Dimension (Height)	635 mm
Overall Dimension (Width)	690 mm
Overall Dimension (Depth)	548 mm
Firebox Dimension (Height)	362 mm
Firebox Dimension (Width)	522 mm
Firebox Dimension (Depth)	432 mm
Door Opening Dimension (Height x Width)	256 x 522mm
Glass Viewing Size (Height x Width)	285 x 570mm
Back of Heater to Flue Centre	205 mm
Flue Size	150mm
Shipping weight	197kg
Linings	Cast Iron Liners on walls
Baffle thickness	8mm
Glass Type	Flat, toughened 5mm ceramic
Hearth & Clearance requirements - Heater only, perforated outer flue kit	
Min. Hearth Width	945 mm
Min. Hearth Depth	900 mm
Min. Hearth Thickness	140 mm
Min. In Front Of Unit	330 mm
Rear Clearance	50mm*
Side Clearance	325 mm
Corner Clearance	75mm*
	* denotes standard flue shield required (included)
Hearth & Clearance requirements - Heater only, solid outer flue kit	
Min. Hearth Width	945 mm
Min. Hearth Depth	1005 mm
Min. Hearth Thickness	140 mm
Min. In Front Of Unit	330 mm
Rear Clearance	155 mm
Side Clearance	325 mm
Corner Clearance	50 mm



# General Product Specifications

Eureka **Pearl Modular** & Jindara **Tilga Modular**

Hearth & Clearance requirements - With optional bench, perforated outer flue kit	
Min. Hearth Width	945 mm
Min. Hearth Depth	900 mm
Min. Hearth Thickness	9 mm
Min. In Front Of Unit	300mm
Rear Clearance	50mm*
Side Clearance	325 mm
Corner Clearance	75mm*
* denotes standard flue shield required (included in wood heater)	
Hearth & Clearance requirements - With optional bench, solid outer flue kit	
Min. Hearth Width	945 mm
Min. Hearth Depth	1005 mm
Min. Hearth Thickness	9 mm
Min. In Front Of Unit	300mm
Rear Clearance	155 mm
Side Clearance	325 mm
Corner Clearance	50 mm
Bench Dimensions	
Height	280 mm
Width	1200 mm
Depth	550 mm
Between Legs	1080 mm
Emissions and Efficiency	
Emissions	0.9g/kg
Efficiency	80%*
Peak Output	16kw
*Peak efficiency % quoted	
CLEARANCES AND SPECIFICATIONS PROVIDED IN THIS TABLE ARE FOR REFERENCE ONLY. ALWAYS REFER TO THE OWNER'S MANUAL FOR EXACT SPECIFICATIONS PRIOR TO INSTALLATION	